

BiPAC 8800AXL

**Dual-band Wireless-AC 1300Mbps
ADSL2+ 3G/4G LTE Router**


Quick Start Guide



PLEASE READ THE QUICK START GUIDE AND FOLLOW THE STEPS CAREFULLY. THIS QUICK START GUIDE WILL HELP YOU INSTALL THE DEVICE PROPERLY AND AVOID IMPROPER USAGE. IF YOU NEED MORE INFORMATION ON THIS SOFTWARE CONFIGURATION, PLEASE REFER TO THE USER MANUAL ON CD-ROM.

Package Contents

- BiPAC 8800AXL Dual-band Wireless-AC 1300Mbps ADSL2+ 3G/4G LTE Router
- CD containing the on-line manual
- RJ-11 ADSL/ telephone cable
- Ethernet (RJ-45) cable
- Power adapter
- Quick Start Guide
- Splitter/ Micro-filter (Optional)

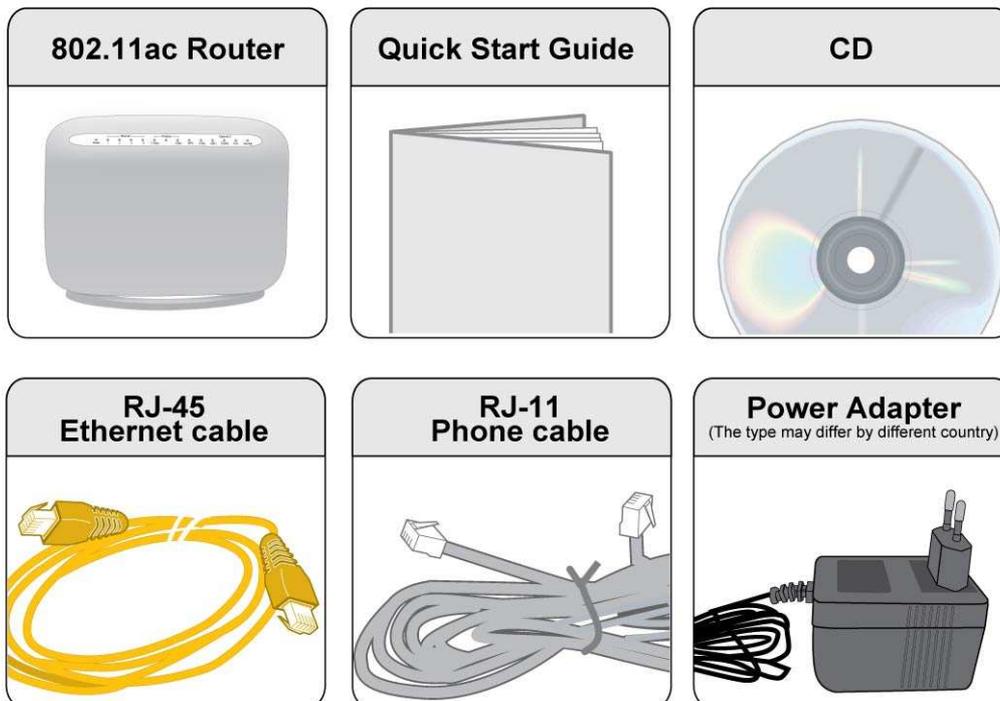

Warning

- Do not use the router in high humidity or high temperatures.
- Do not use the same power source for the router as other equipment.
- Do not open or repair the case yourself. If the router is too hot, turn off the power immediately and have it repaired at a qualified service center.
- Avoid using this product and all accessories outdoors.




Attention


- Place the router on a stable surface.
- Only use the power adapter that comes with the package. Using a different voltage rating power adaptor may damage the router.

Hardware Overview

The Front LEDs

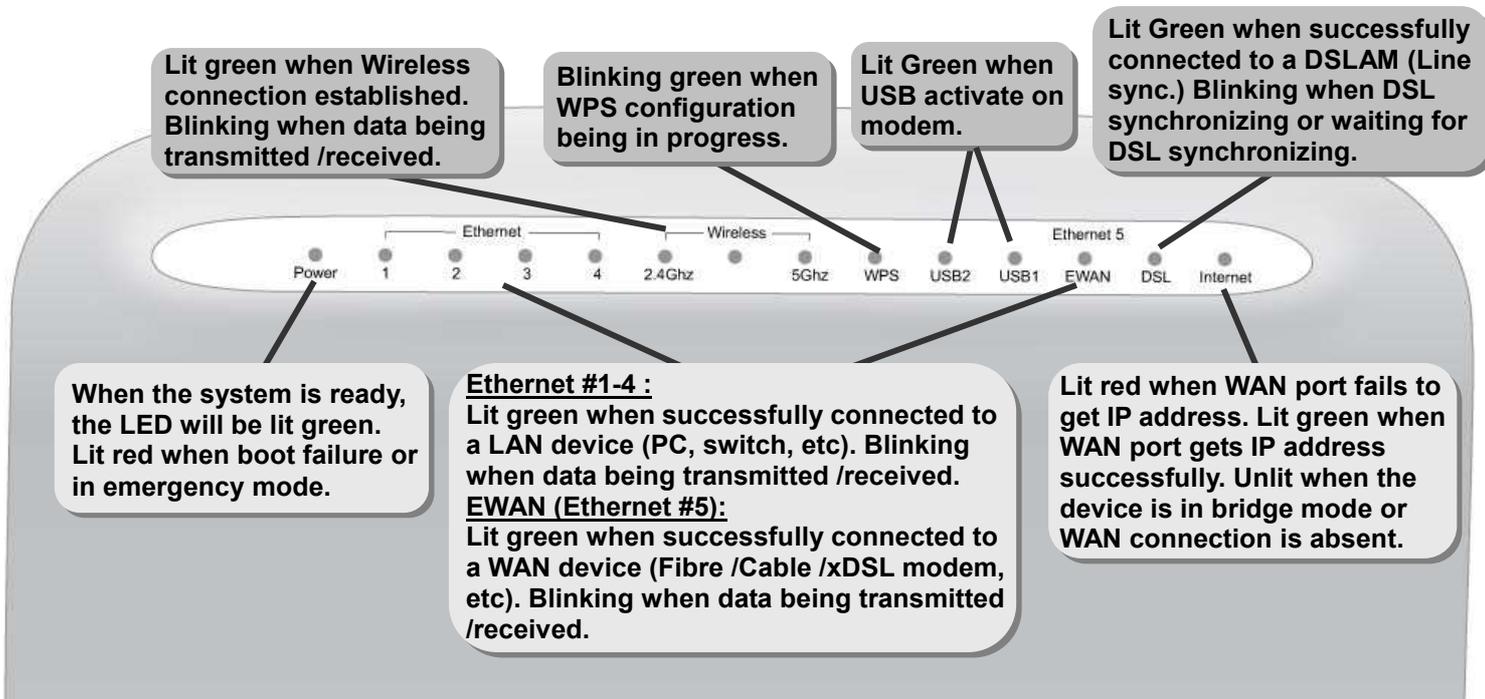


The Rear Ports

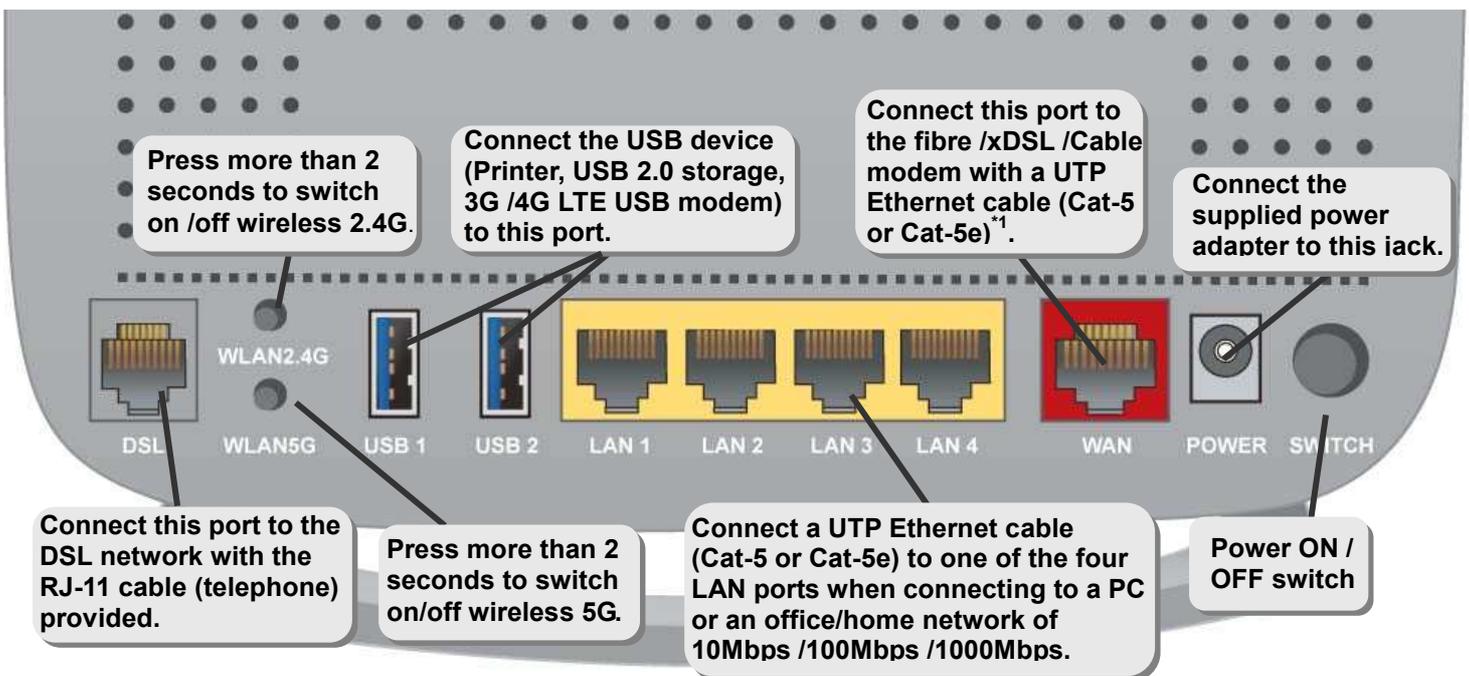

*Note 1: Port #5 can be configured as an Ethernet Interface for normal LAN use.
 2: For WPS configuration, please refer to the WPS section of User Manual.

Press WLAN button more than 2 seconds to switch on /off the whole wireless connectivity, including wireless 2.4G and wireless 5G. Please Note that the action is based on the status of wireless 2.4G, if now the wireless 2.4G is on, then you press the WLAN button more than 2 seconds to switch off both wireless modes.

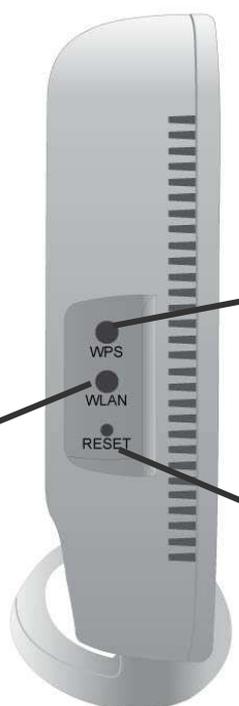


Push WPS button to trigger Wi-Fi Protected Setup.*2


After the device is powered on, press it 5 seconds or above to restore to factory default settings (this is used when you can not login to the router, e.g. forgot the password)


Hardware Connection

ADSL Router mode:

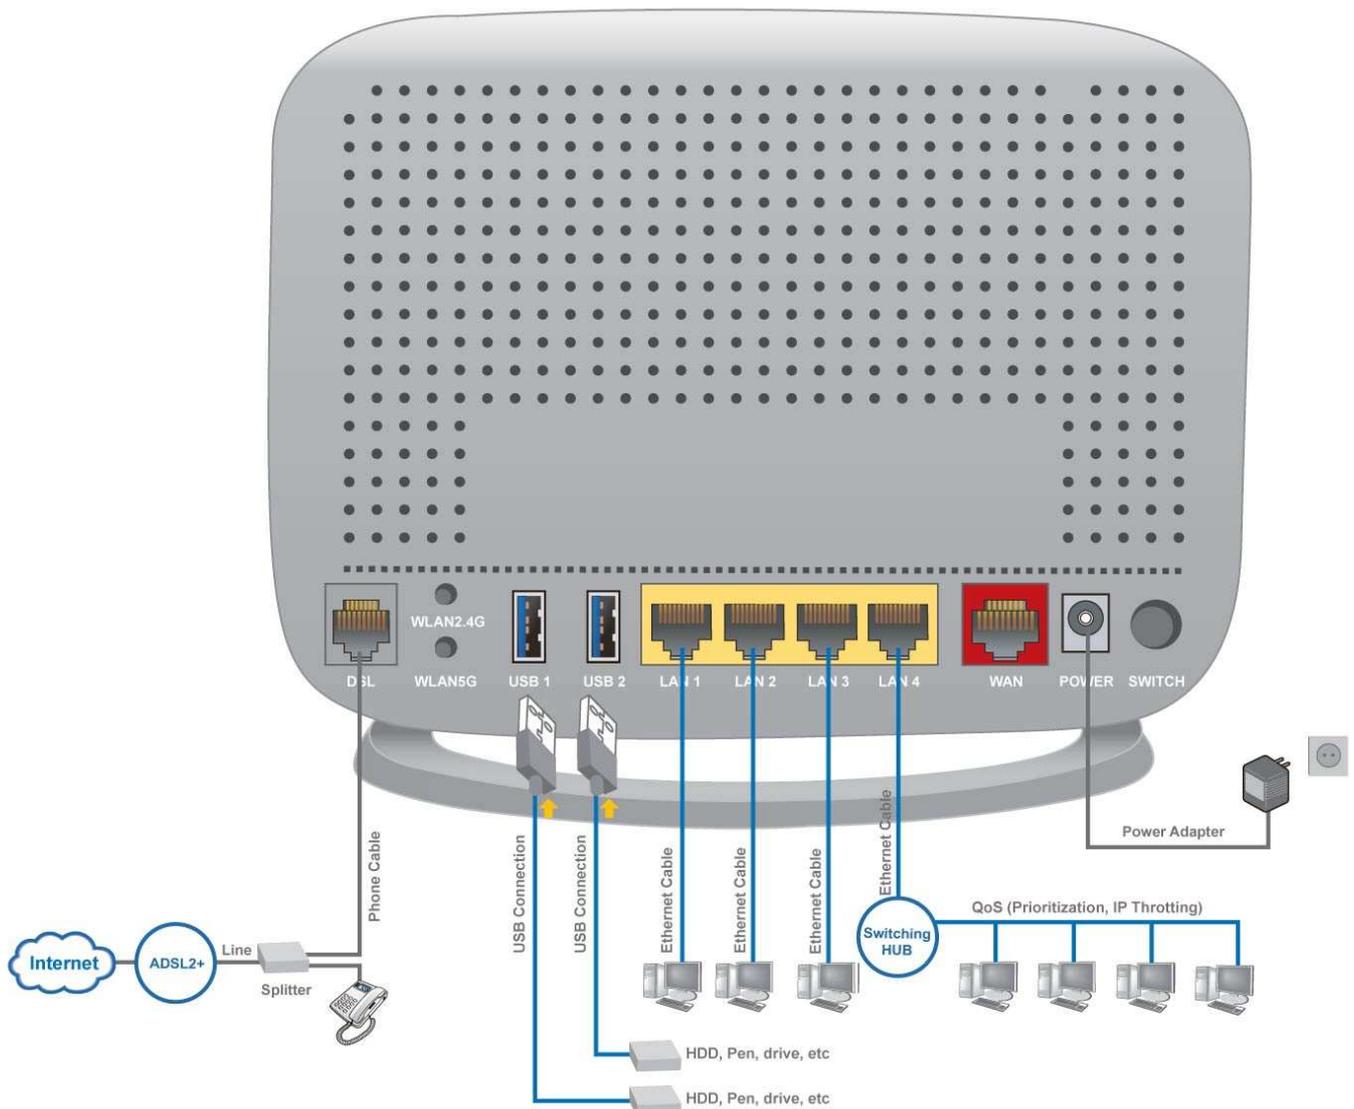

Broadband Router mode:

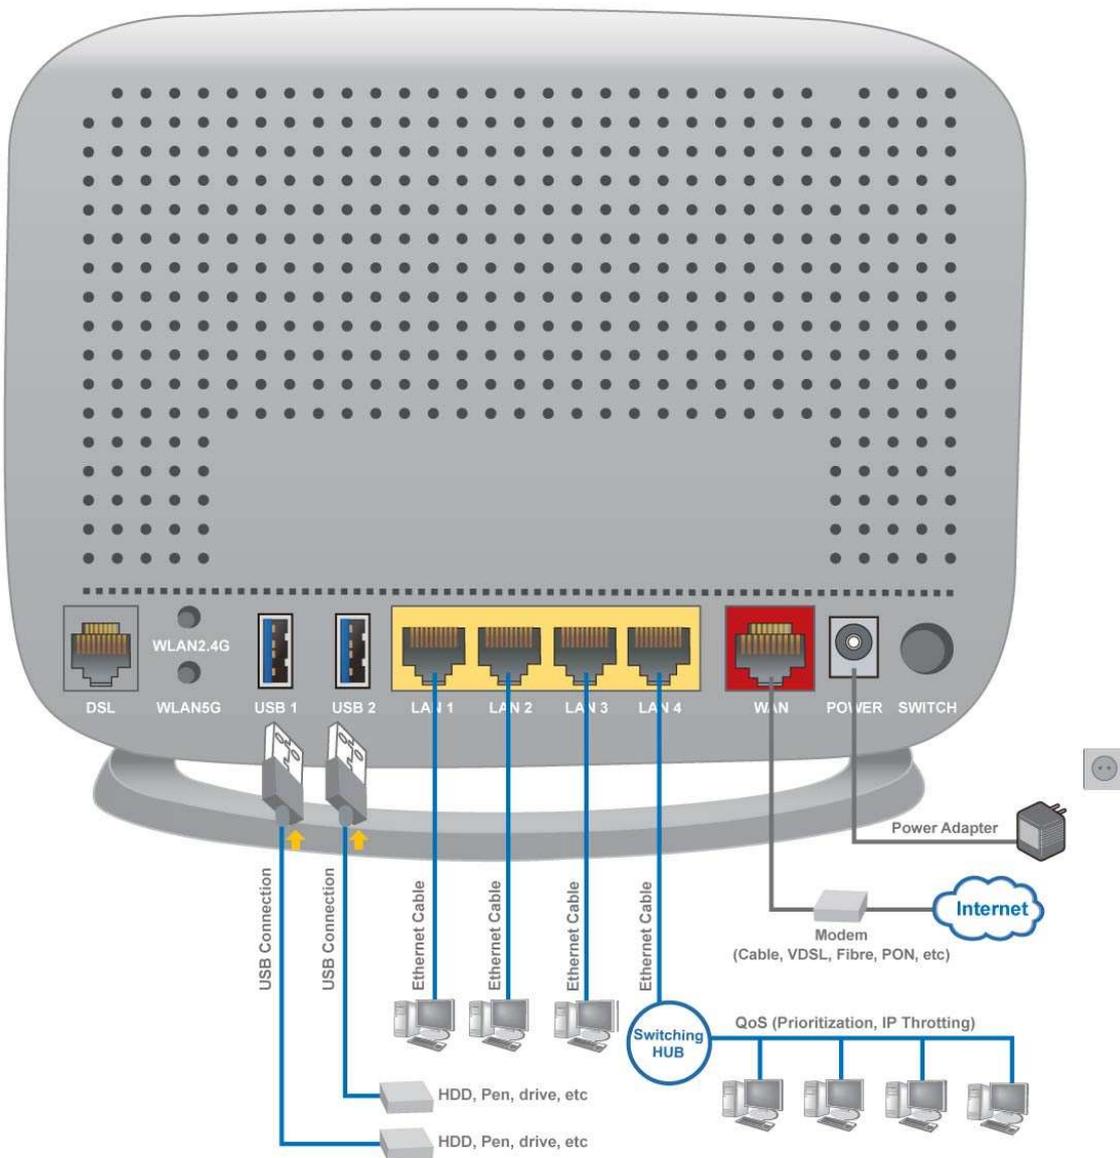


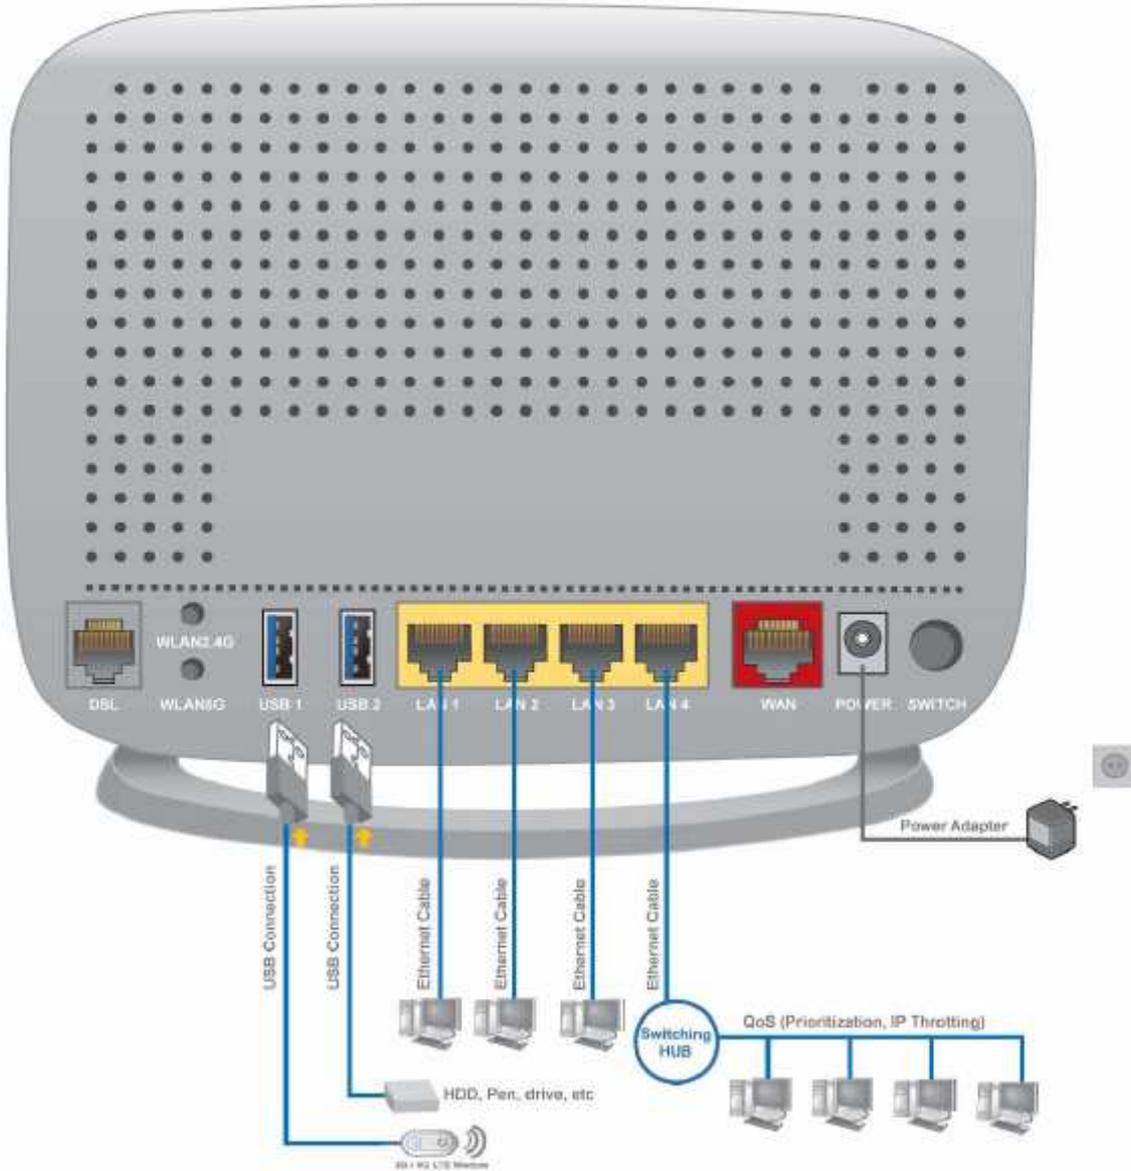

Hardware Installation


1. Power Connection

Plug the supplied power adapter in to the wall jack and the other side to the router. Please note that the plug type may differ according to country.

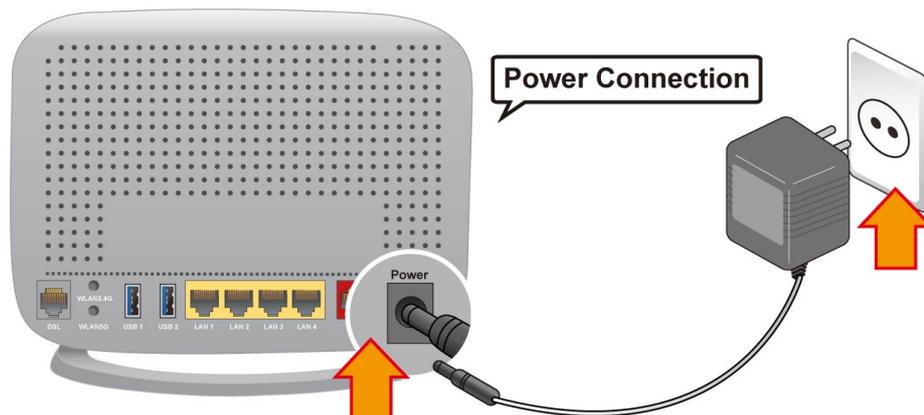


2. LAN Connection

Connect the supplied RJ-45 Ethernet cable to one of the Gigabit Ethernet ports, and the other side to the PC's Ethernet interface.

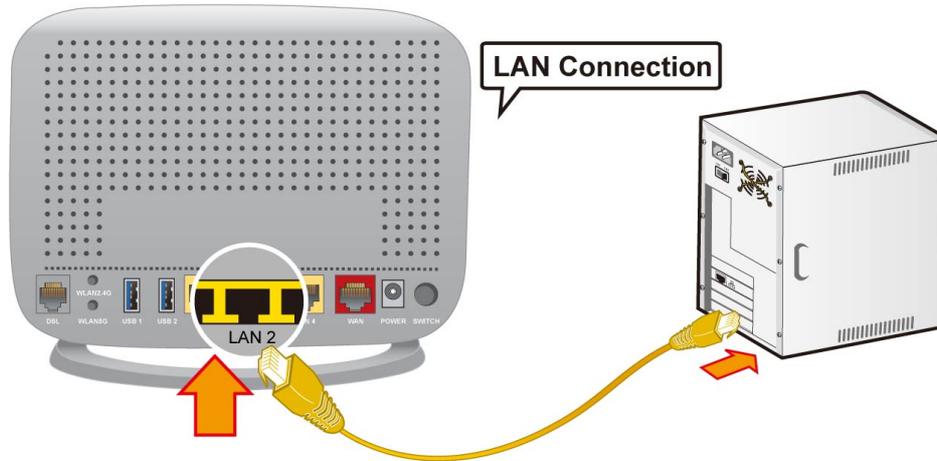


3. ADSL Connection

Connect the supplied RJ-11 phone cable to the router's ADSL port, and the other side to the phone jack on the wall.

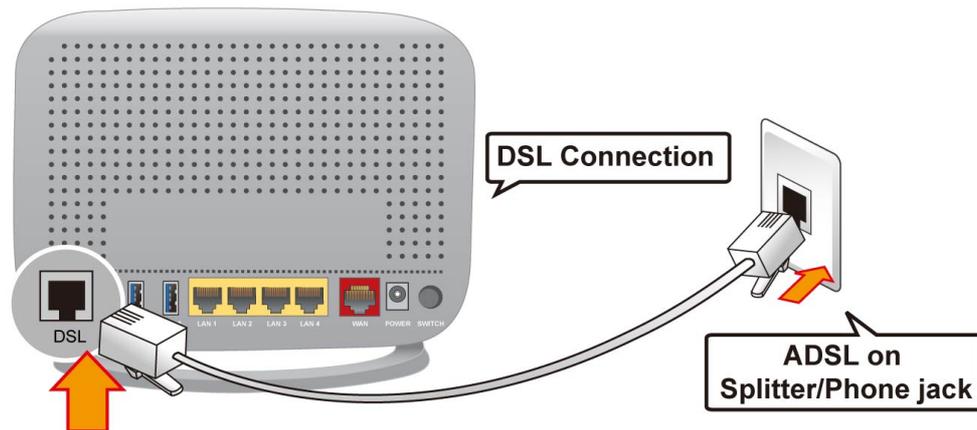


4. EWAN Connection

Connect RJ-45 Ethernet cable to the EWAN port and connect the other side to another alternative broadband device, such as Cable / FTTH device or PON optic lines. Please refer to User Manual for detail instruction.

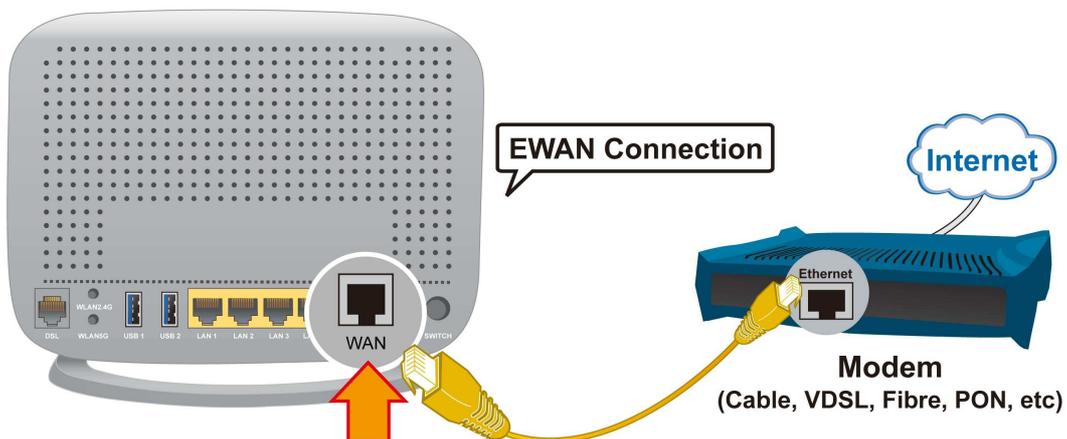


5. USB Connection

- 1) Print server and storage service through USB 2.0 port : FTP server and DLAN media server supported.

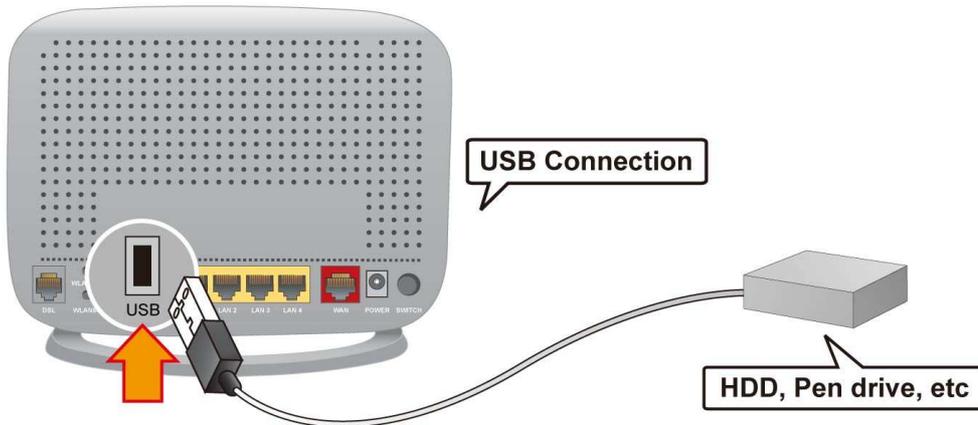

- 2) The USB 2.0 ports support 3G/4G LTE modem connectivity : Users can conveniently access Internet via 3G/4G LTE, eliminating the limitations of the wired network. This solution also employs an auto fail-over feature to ensure always-on connectivity for SOHO users.

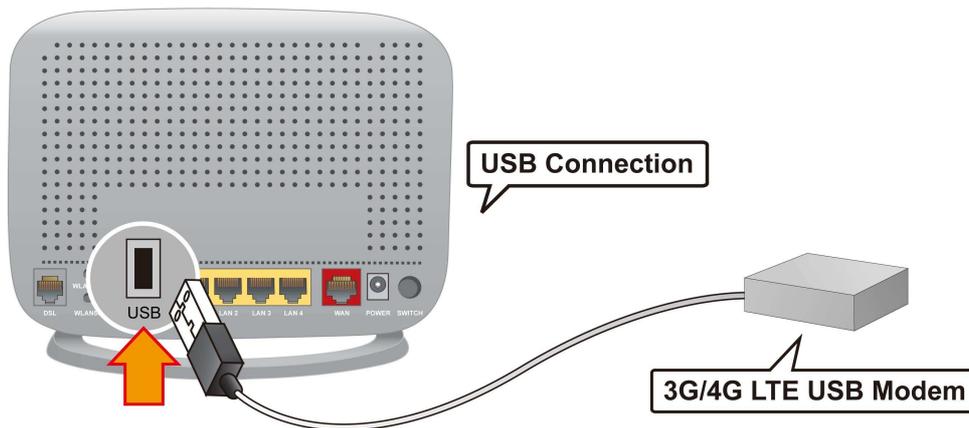


6. Splitter/ Micro-filter Connection

The Splitter / Micro-filter are important for ADSL installation, they help direct high-frequency signals to the ADSL modem & low frequency signals to the telephone or other analogue device to prevent inter-modulation distortion & get good speed/stable ADSL sync rate.


- a) Splitter connection

If the installation has only a single telephone and a single ADSL modem, then a splitter can be employed.

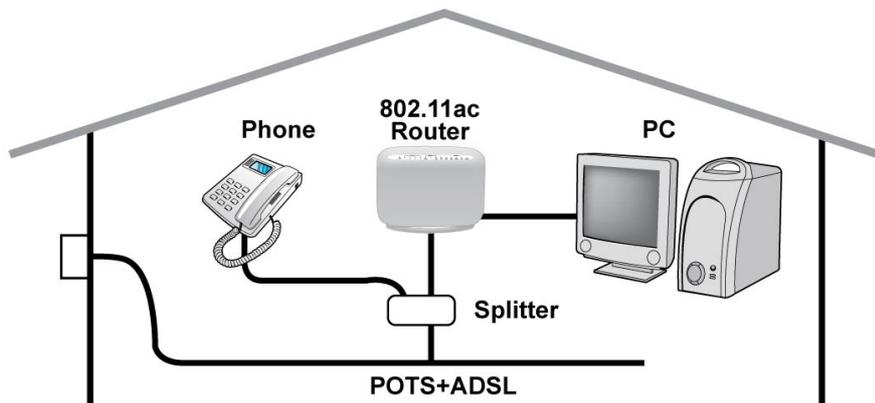

b) Micro-filter connection

If the installation has several telephones or other analog devices, then an internal micro-filter can be employed at each analog device.

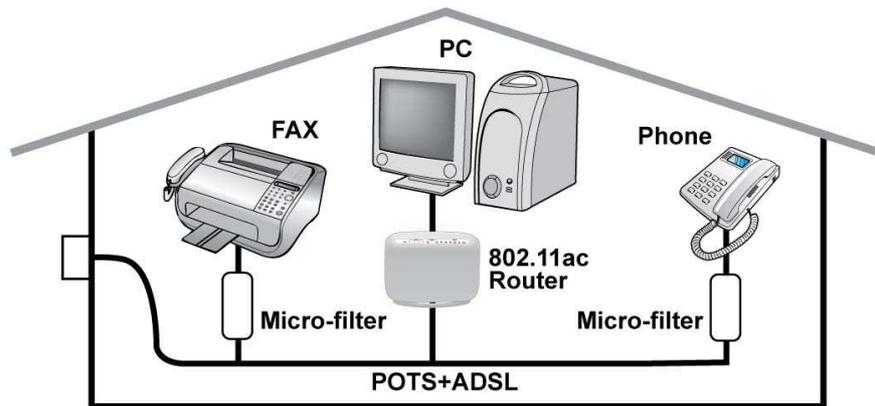

Easy Sign-On

Make sure that device is powered on, Ethernet cable is connected to your PC and ADSL line is in sync. Then open up a web browser and you will automatically be directed to the step-by-step easy sign on configuration wizard which will guide you to complete the basic network configuration to connect to the internet.

Connecting to the Router

1. Open the web browser and type <http://192.168.1.254> in the browser's address box. This number is the default IP address for this router. Press **Enter**.
2. A username and password window will appear. **The default username is "admin", and password is "admin"**. Press **OK** to proceed.
3. You will get a status report web page and main menu screen.

Please see the relevant sections of user manual for detailed instructions on how to configure your router.

Troubleshooting

1. **None of the LEDs are on when you turn on the router.**

Check the connection between the adapter and the router. If the error persists, you may have a hardware problem. In this case you should contact technical support.

2. **Can't ping any PCs on the LAN.**

Check the Ethernet LEDs on the front panel. The LED should be on for a port that has a PC connected. If it is off, check the cables between your router and the PC. Make sure you have uninstalled any software firewall for troubleshooting. Verify that the IP address and the subnet mask are consistent between the router and the workstations.

3. Frequent loss of ADSL line sync (disconnections).

Ensure that all other devices connected to the same telephone line as your router (e.g. telephones, fax machines, analogue modems) have a line filter connected between them and the wall socket (unless you are using a Central Splitter or Central Filter installed by a qualified and licensed electrician), and ensure that all line filters are correctly installed and the right way around. Missing line filters or line filters installed the wrong way around can cause problems with your ADSL connection, including causing frequent disconnections. If you have a back-to-base alarm system you should contact your security provider for a technician to make any necessary changes.

Product Support and Contact Information

Most problems can be solved by referring to the **Troubleshooting** section in the user manual. If you cannot resolve the problem with the **Troubleshooting** chapter, please contact the dealer where you purchased this product.

Contact Billion

Billion Australia – <http://au.billion.com>

Basic Support Hotline – 08 7071 3886 (Basic Support)

Helpdesk – <http://au.billion.com/helpdesk/> (Lodge a support ticket)

Billion Support Forums – <http://au.billion.com/forums> (Get help & suggestions from Billion & other users)

Download site – <http://au.billion.com/product/fd.php> (Download latest firmware, drivers & User Guides)